

[http://links.vs-service.com/downloads/70-098\\_V05\\_DEEN\\_Serie\\_600\\_Gesamt.pdf](http://links.vs-service.com/downloads/70-098_V05_DEEN_Serie_600_Gesamt.pdf)

## Montageanleitung

### Serie 600

**Bitte sorgfältig aufbewahren!**

## Assembly Instruction

### Serie 600

**Please store this document in a safe place!**

## Contents

1. General information
2. General note on reading and storing the instructions
3. General note on safety
4. Installing/removing the glass door
5. Replacing the adjustable shelf inserts
6. Installing/removing casters
7. Cabling through the cable outlets for media rack 1 and sideboard
8. Opening out/removing the back panel of media rack 1 and sideboard
9. Mounting the monitor screen

## 1. General information

- 9 Before commencing assembly, check whether the supplied parts correspond to those in the assembly/delivery notes (and drawings) and whether they have being damaged during transportation. If
- 10 you are unable to erect the furniture correctly, please contact the
- 11 Customer Service department at VS Head Office.
- 12


## 2. General note on reading and storing the instructions

- 14 Carefully read and digest these instructions and above all the
- 15 notes on safety before using the products. Keep the instructions in a safe place for future reference and pass them on to other users.

## 3. General note on safety:

The following symbols and notes are used in our Instructions for Use:


---

 **Important!** This symbol indicates an important assembly note.





---



---

 **Caution!** This symbol indicates a very important note.


---

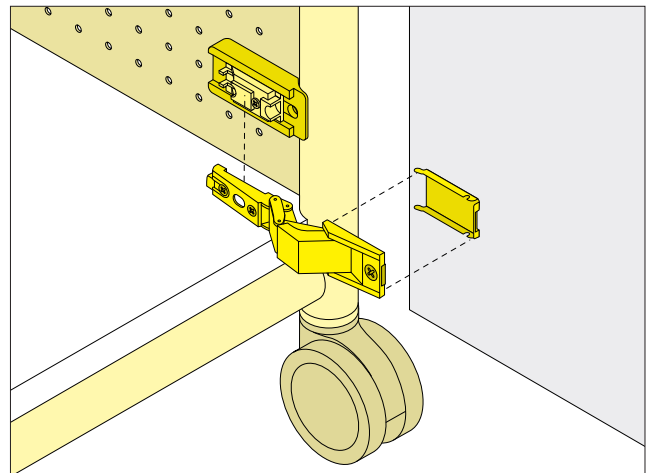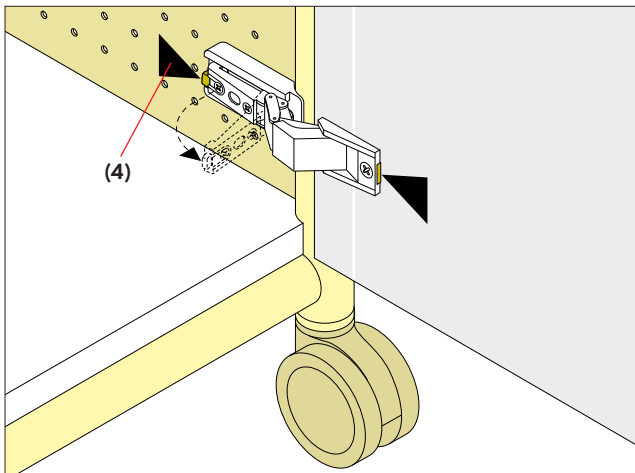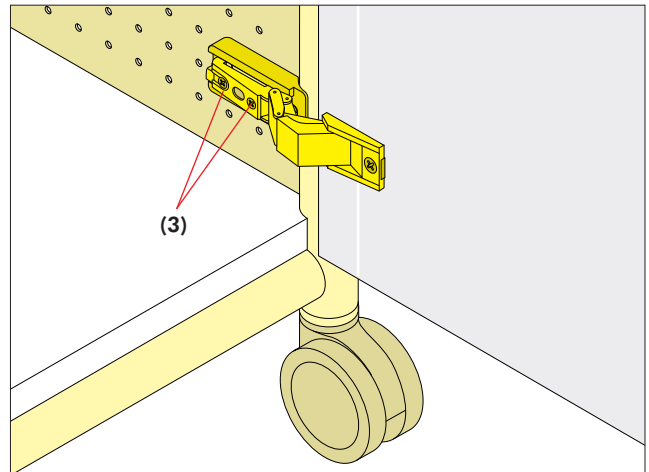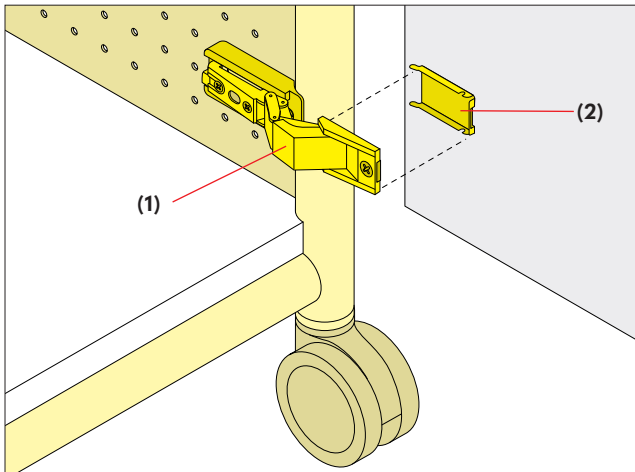

## 4. Installing/removing the glass door


**Installation:** Remove the glass door from the packaging material. Clip glass-door hinge (1) into the plate (2) glued to the glass pane. Then, if necessary, adjust the door with screws (3).

**Removal:** Open the door. Pull release lever (4) towards the middle of the cabinet to unclip all the hinges.

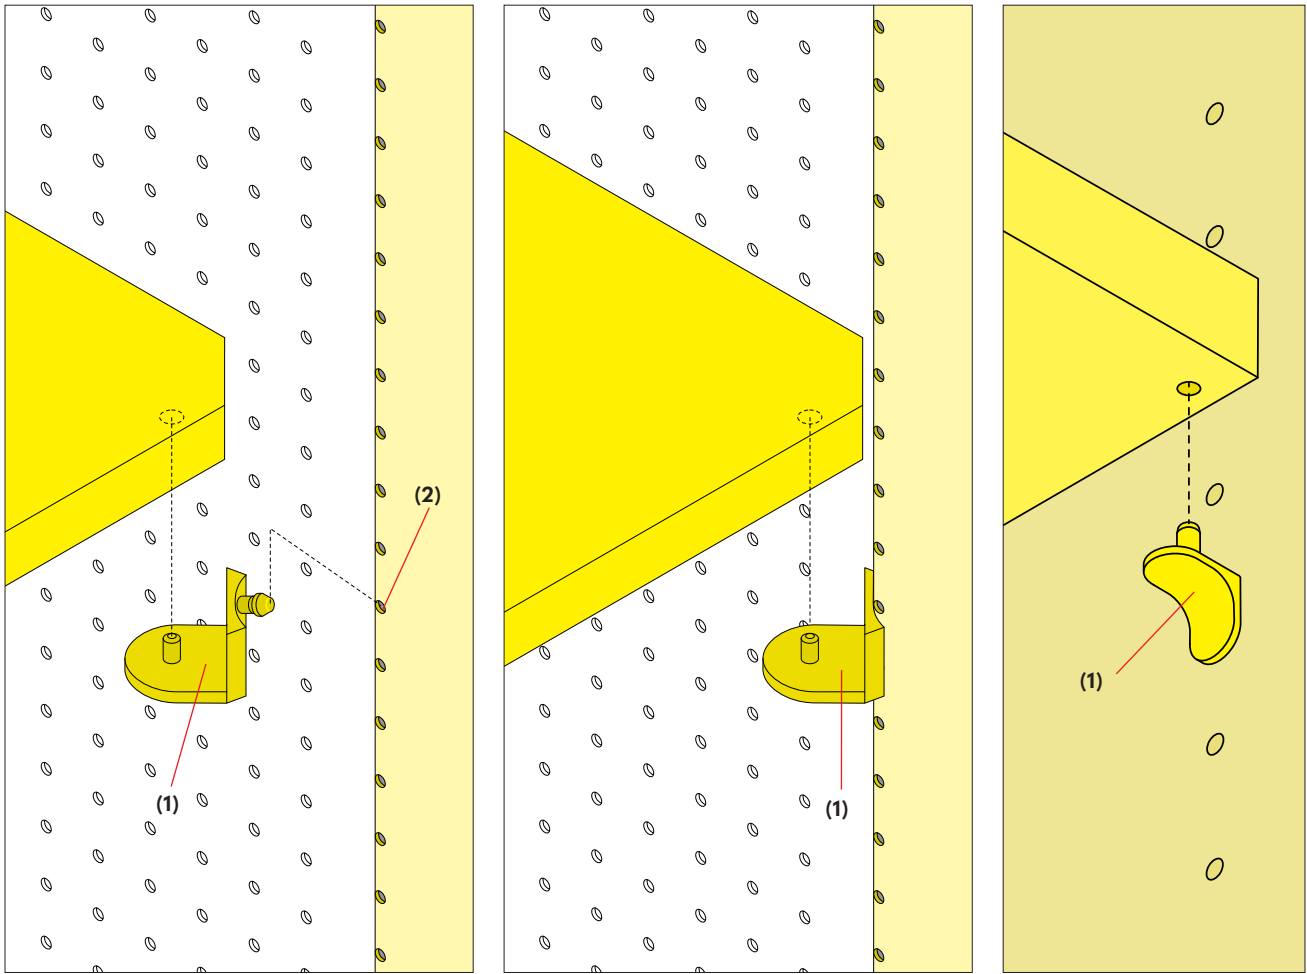

## 5. Replacing the adjustable shelf inserts

Lift and remove the adjustable shelf insert. Remove shelf supports **(1)** (4x). Engage the shelf supports in the appropriate hole **(2)** for the desired height. Insert the adjustable shelf insert. Steel adjustable shelf inserts are also secured with shelf supports.

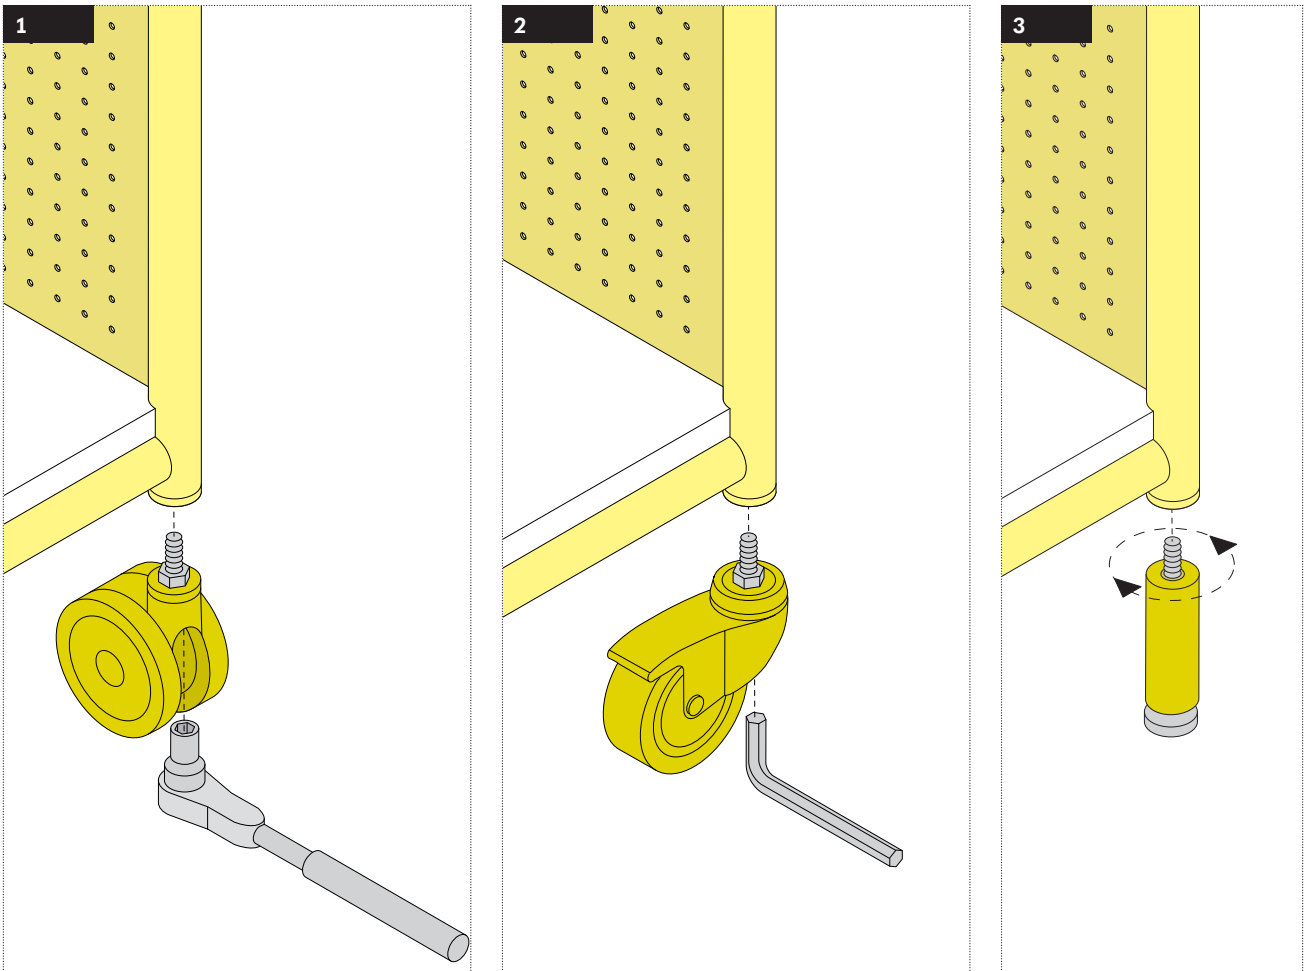

## 6. Installing/removing casters


**Installing/removing 75 mm dia. design caster [Figure 1]:** Release the caster screw connection with an engineer's wrench (12 mm A/F) between the top edge of the caster and the bottom edge of the tube and unscrew. Screw in the new caster.

**Installing/removing 100 mm dia. design caster [Figure 1]:** In the lower caster area release the hexagon head with a wrench socket (12 mm A/F) and unscrew. Screw in the new caster.

### Installing/removing 75 and 100 mm dia. technical caster



**[Figure 2]:** In the lower areas release the screw with a 7 mm Allen key and unscrew. Screw in the new caster.

**Installing/removing adjustable foot [Figure 3]:** Screw the adjustable foot out of the round-tube leg. Screw in the new adjustable foot.

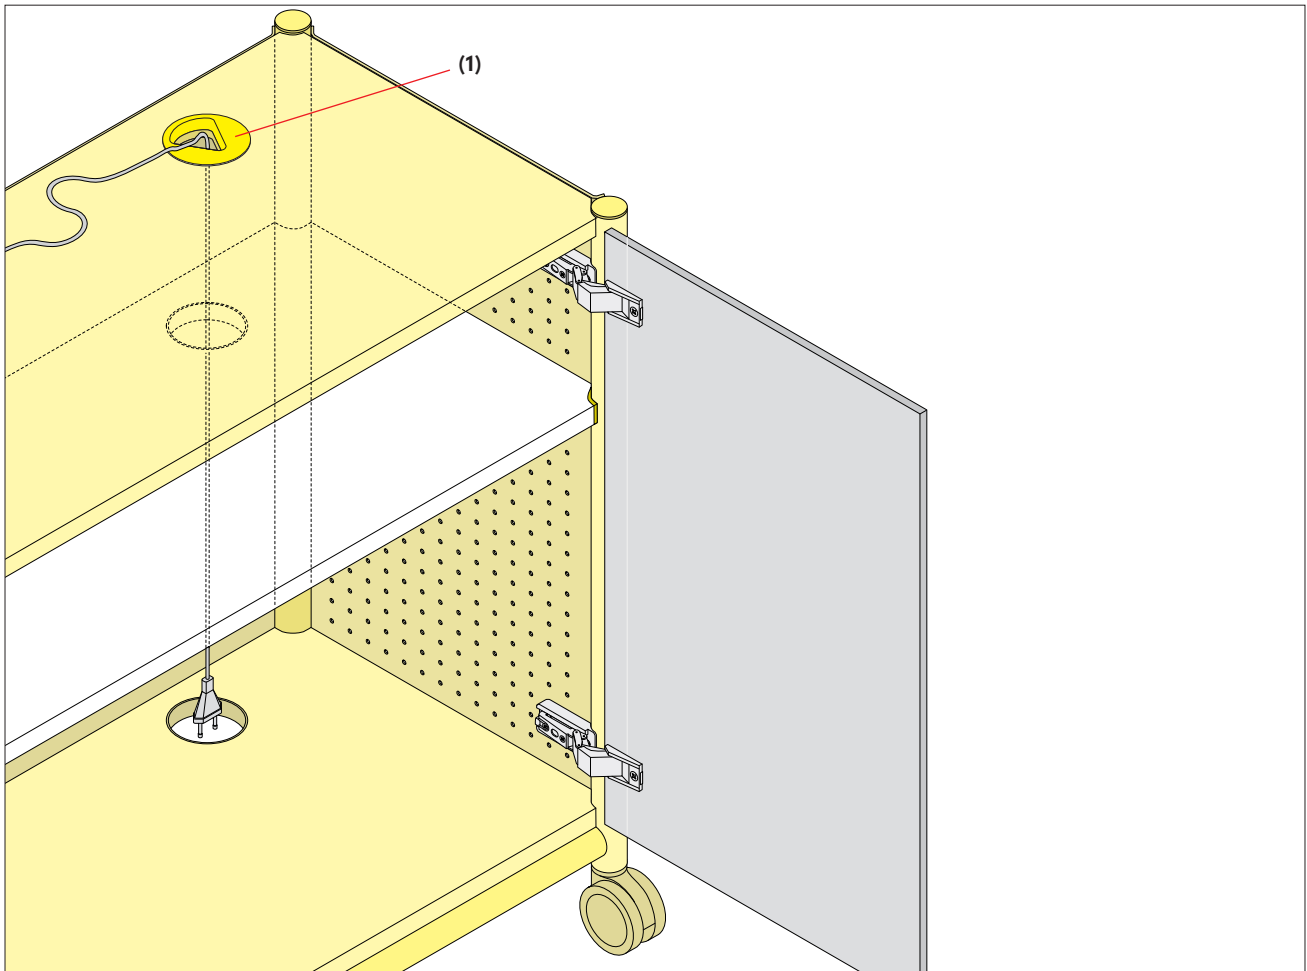

## **7. Cabling through the cable outlets of media rack 1 and sideboard**

Feed the cable (e.g. monitor) through cable outlet **(1)** into the module. There are two cable outlets in the base. Feed the corresponding cables outwards through these outlets.

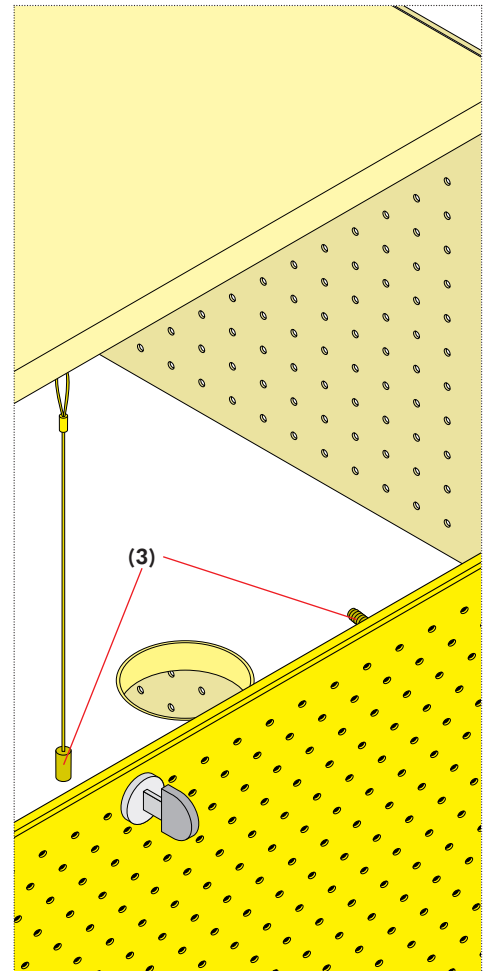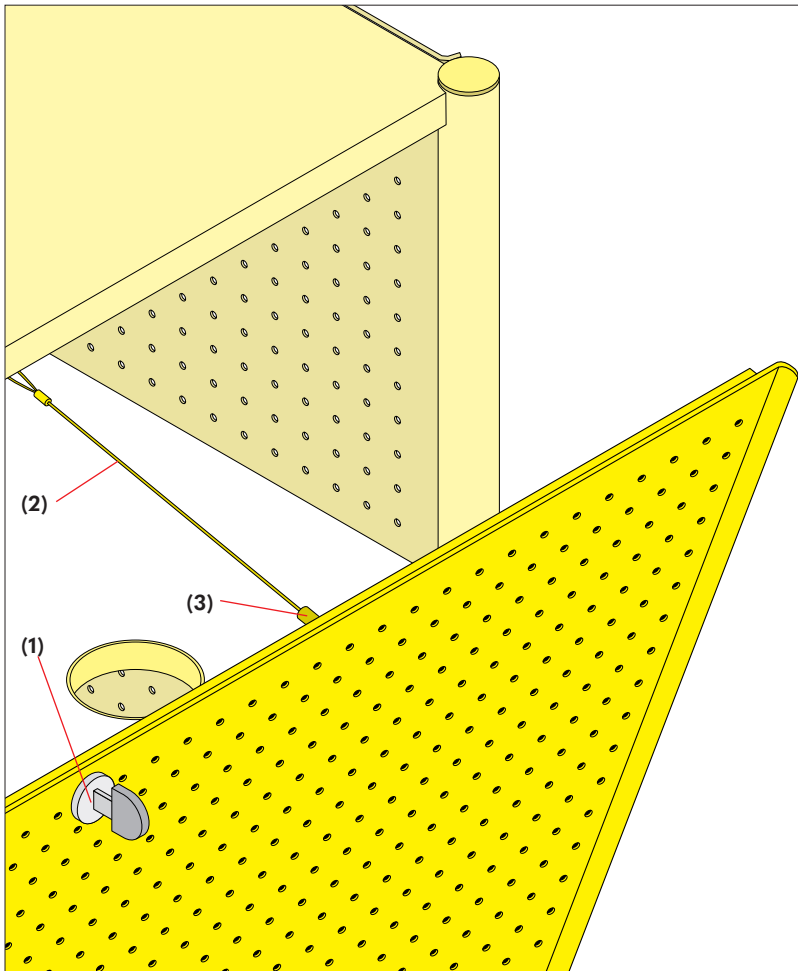

## 8. Opening out /removing the back panel of media rack 1 and Sideboard




Cables can be fed into the module through the cover top. The back panel must be opened out for this purpose.

**Opening out the back panel:** Release back-panel lock (1). Open out the back panel (extent of opening limited by steel cable (2)).

**Removing the back panel where necessary:** Release steel cable (2) from the back panel by turning knurled nut (3). Remove the back panel.

**Refitting the back panel:** Position the back panel in the groove. Twist knurled nut (3) of steel cable (2) back into the back-panel screw.

**Cabling in the body:** There are two cable outlets in the base. Feed the corresponding cables outwards through these outlets (see "Cabling through the cable outlets").

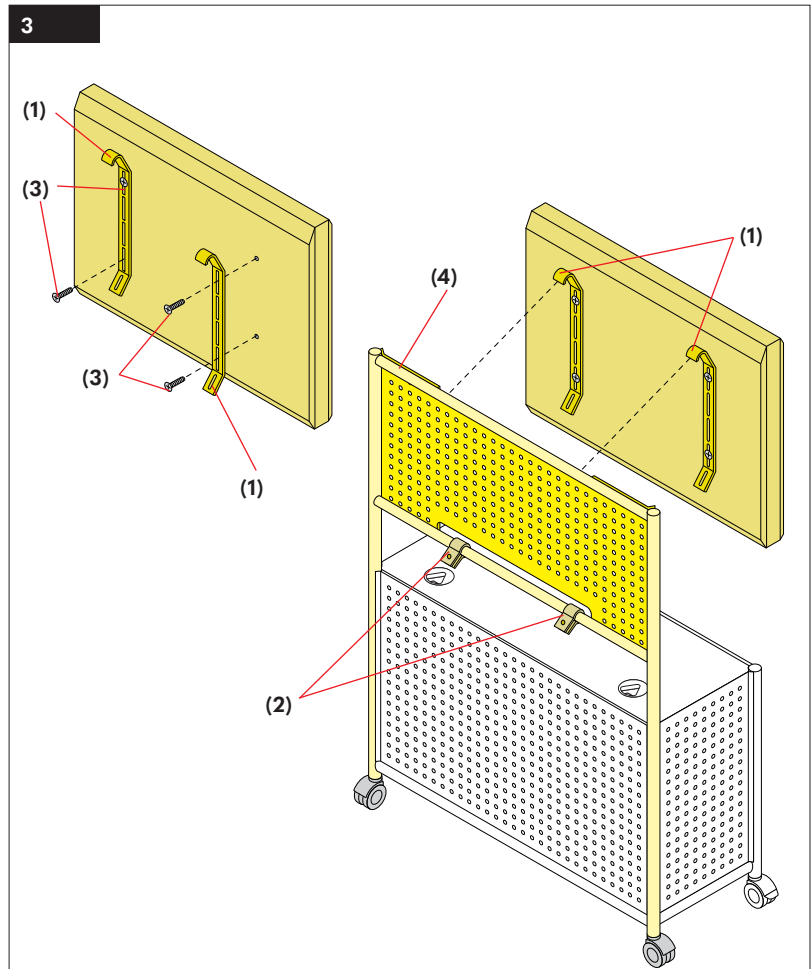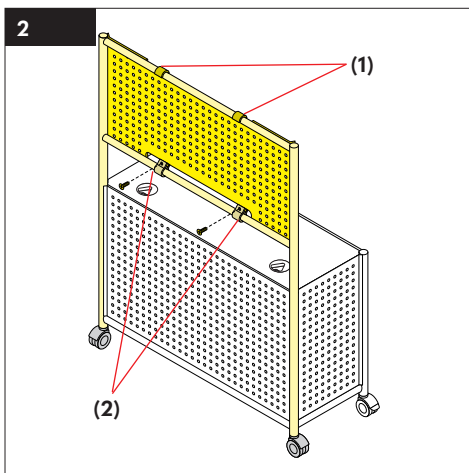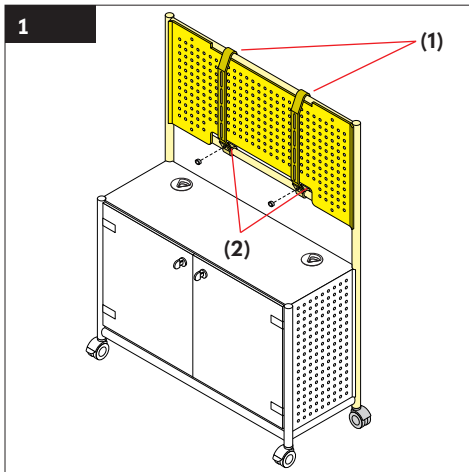

## 9. Mounting the monitor screen

(Supplied in 2 parts: sideboard complete with monitor brackets and monitor screen)

Release the plastic holders (2) attached to the monitor brackets (1) at the bottom (2) [Figure 3] (M6 x 15 mm screws + M6 nut), turn to the side and disengage the monitor brackets. Secure the two monitor brackets (1) in the designated mounting positions (1) on the back of the monitor screen (3) (4x M6 x 20 mm screw).

Engage the monitor screen with the monitor brackets (1) on the upper cross-tube (4) and align horizontally. Mount plastic holders (2) in reverse sequence on monitor brackets (1) [Figure 2]. Feed the power cable of the monitor screen downwards into the module (to do so, open out the lower perforated-sheet back panel – see “Opening out/removing the back panel”).

**Disposal:** The indicated electric and electronic components must not be disposed of with the ordinary waste. They must be removed from the furniture unit before the unit is sent for disposal. They are to be disposed of at authorized collection and return points.

