

http://links.vs-service.com/downloads/70-352_V03_DEEN_Level.pdf

Operating Instructions

Level

31407-31409, 31427-31429

Intended use: These chair models have been designed and are suitable for use in educational establishments. No liability will be assumed for any use other than that intended, for example in workshops, storage rooms or damp locations. To be used in closed premises only.

General note on reading and retaining these Instructions: Read these Instructions, the instructions for the associated assembly parts and, in particular, the safety instructions carefully before using the products and adhere to these. Keep these Instructions in a safe place for future consultation and communicate them to other users.

General note on safety: The following symbols and notes are used in our Instructions for Use:

Important!

This symbol indicates an important note.

Caution!

This symbol indicates a very important note.

On the Web: You can find these Instructions on the Web.

Standards: Tested in accordance with DIN EN 1729 - 1/2.


Scope of delivery: The products are supplied assembled.

Use: Please take account of the notes on the following pages.

Faults and service: If any faults occur, please contact our Customer Service: kundenservice@vs-moebel.de

Maintenance and cleaning: On the Internet: vs.de/kataloge/reinigung/en

Product transfer: If the product is transferred to another party then it must be accompanied by these Instructions. For information on the environmentally responsible disposal of the product, please contact your relevant local authority department.

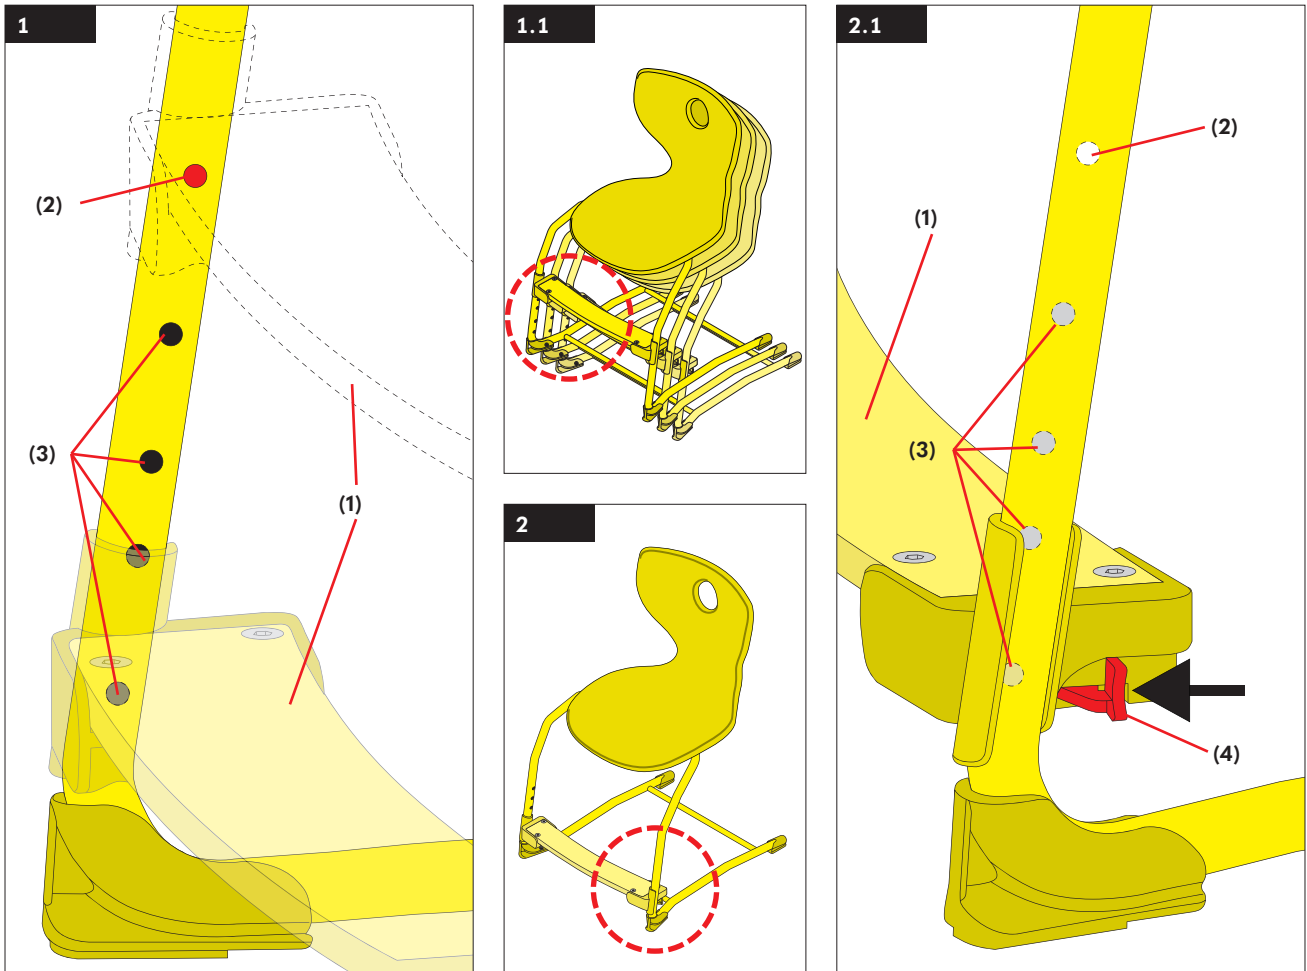

Height positions of the foot support (Figure 1): Chairs coded with a foot support (1) are supplied with the foot support in the topmost hole (2).

The chairs can only be stacked if the foot support is in this position (see Figure 1.1).

Caution! A maximum of 3 chairs may be stacked on top of one another.

Before use, the foot support must be moved to a suitable position for the user. Different height positions (3) are possible depending on the model.

The relevant standard size as per DIN EN 1729-1 is indicated in colour by the sticker on the adjustment unit or on the rear of the chair back.

Model	Standard size
31407/31427	2-3
31408/31428	4-5
31409/31429	6

Adjusting the foot support (Figures 2 and 2.1): Pull the levers (4) on the outside of the foot support forwards on both sides simultaneously to release the lock. You can now slide the foot support to the required hole. Release the levers to allow the lock to audibly engage.

Important! Do not tilt the foot support. The adjustment operation should be as parallel as possible.

Caution! Each time the foot support is adjusted, make sure that it has engaged again.

Caution! Before the chairs are stacked, the foot support must be moved to the topmost position.